



INSTALLATION INSTRUCTIONS

Accessory

KEYLESS ENTRY
P/N 08E60-S9A-100

Application

2004 CR-V

Publications No.


All 26132

Issue Date


SEP 2003

PARTS LIST


2 Transmitters

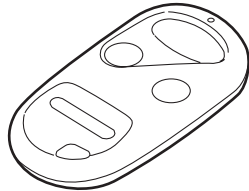

Receiver unit

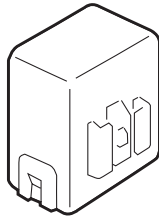


Owner's Manual

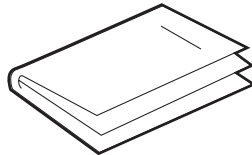

TOOL REQUIRED

#2 Phillips screwdriver


Illustration of the Keyless Entry Installed on the Vehicle

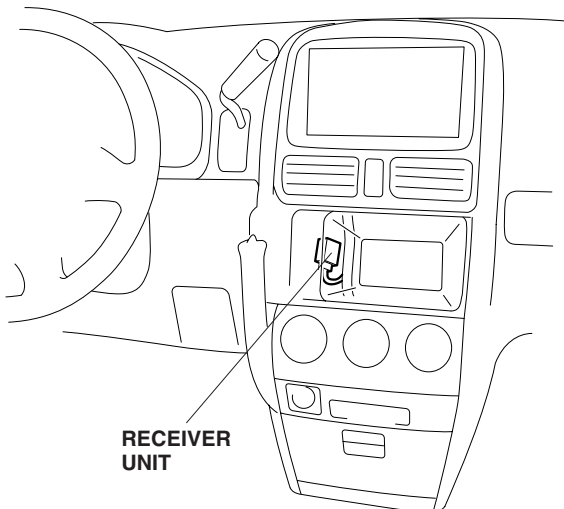


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the radio, then write down the radio station presets.
2. Disconnect the negative cable from the battery.
3. Open the lid. Remove the dashboard pocket (one self-tapping screw, and pull out to release the two clips and three retaining tabs).

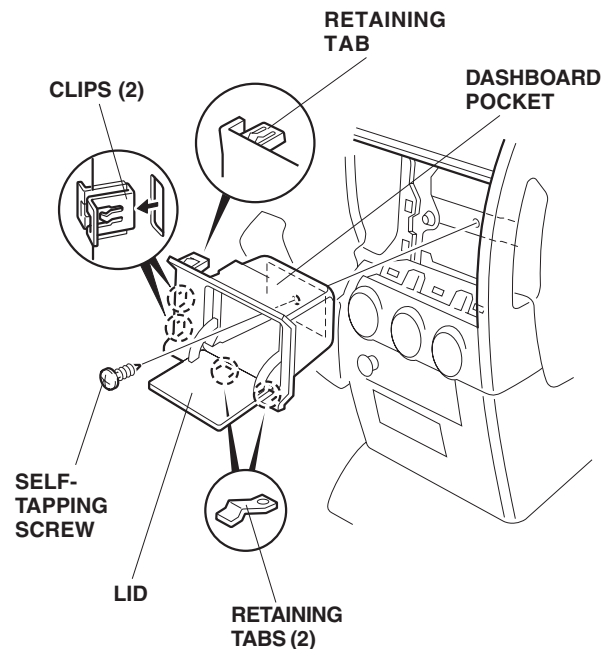

- Slide the receiver unit onto the tab located at the left corner of the pocket opening. Locate the 5-pin connector blue-taped to the vehicle harness, and remove the blue tape to free the connector. Plug the 5-pin connector into the receiver unit.

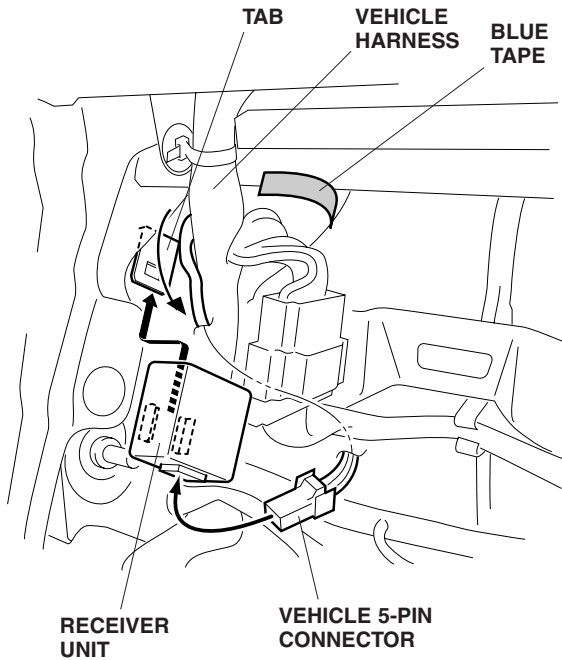

- Reinstall the dashboard pocket.
- Reconnect the negative cable to the battery.
- Enter the customer's radio anti-theft code, and reset the radio station presets.
- Reset the clock.

NOTE: Whenever the battery is disconnected, the driver's window AUTO function is disabled.

- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
- Test the window AUTO function.
- Do the ECM/PCM idle learn procedure.
 - Make sure all electrical items are turned off.
 - Start the engine. Hold the engine speed at 3,000 rpm with no load (in Park or Neutral) until the radiator fan comes on.
 - Let the engine idle for about 5 minutes with the throttle fully closed and with all electrical items off.

NOTE: If the radiator fan comes on during this step, the time it operates must not be included in the 5 minutes.